

SWITCH GEAR FIBERGLASS BOX PAD FOR SERIES 9, 10, & 11 SWITCHES


UGS

Revision

REVISION: Updated Notes, Fiberglass Bends DATE: 03/07/08

DATE: 04/01/08

APPROVAL: *George Sommano*

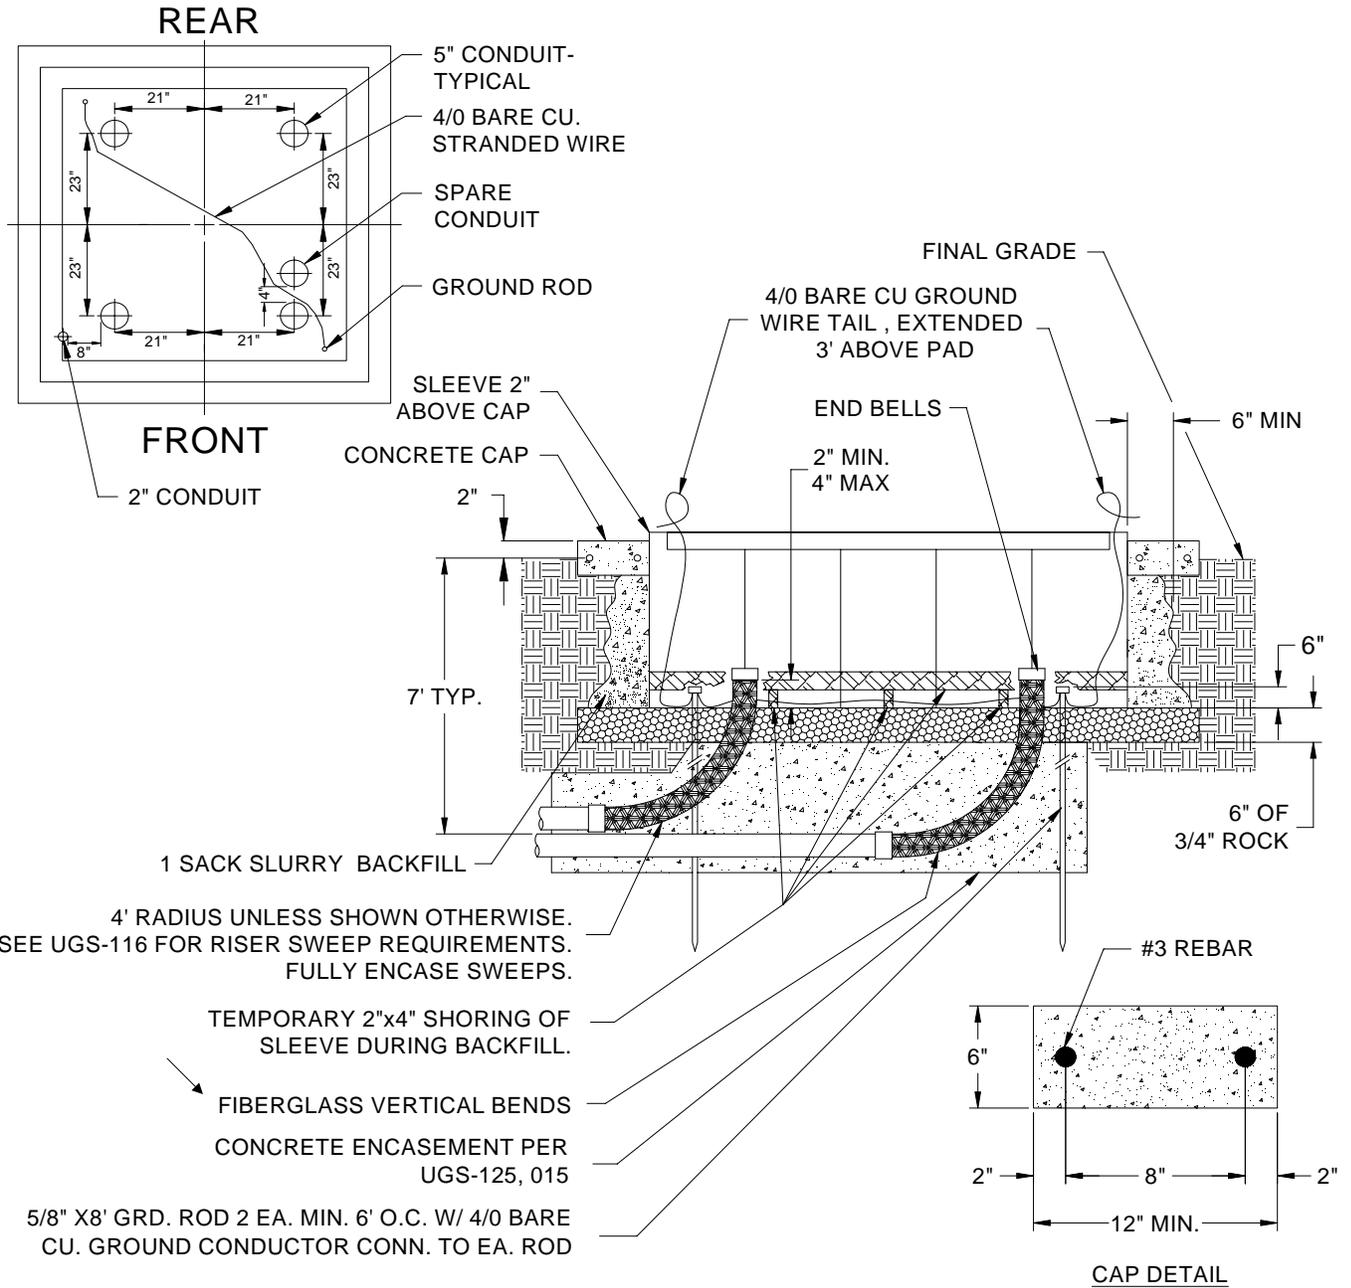

Notes:

1. See UGS-011 for box pad requirements.
2. Termination compartments of the switchgear are not to be installed to the front or rear of the box pad.
3. Where required, spare conduits will be installed as shown above.
4. Barrier posts are required per UGS-290.
5. Refer to UGS-225 for ground rod installation.
6. Conduit sweeps shall be encased with concrete per UGS-125 and UGS-015 mix #4003.
7. Contractor shall provide temporary 2"x4" shoring during backfill. Backfill shall be a 1 sack slurry mix. ←
8. Vertical bends shall be fiberglass. ←