


SWITCHGEAR FIBERGLASS BOX PAD INSTALLATION (FOR SERIES 9, 10 & 11 SWITCHES)

REVISION: Updated Format, Details & Notes



CHECKED BY (ENGINEERING): JRS
 DATE: 12/03/18

CHECKED BY (FIELD): JH
 PREPARED BY: SJR

APPROVED BY: *Stephen E. Saford*

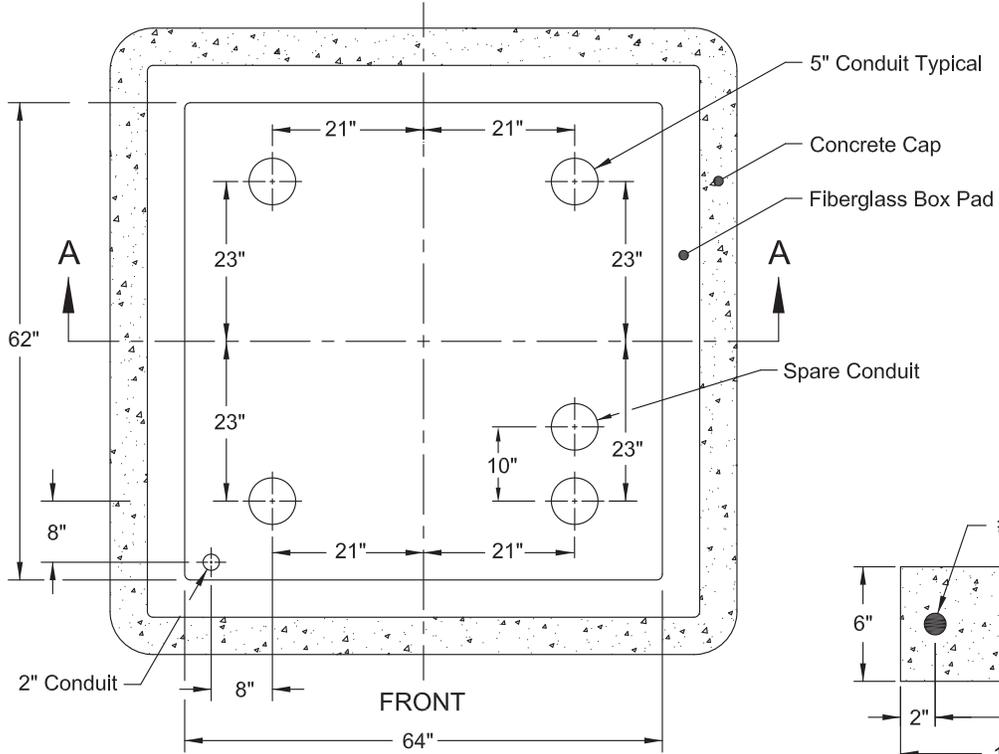

MAINTENANCE ONLY
 NOT FOR NEW CONSTRUCTION

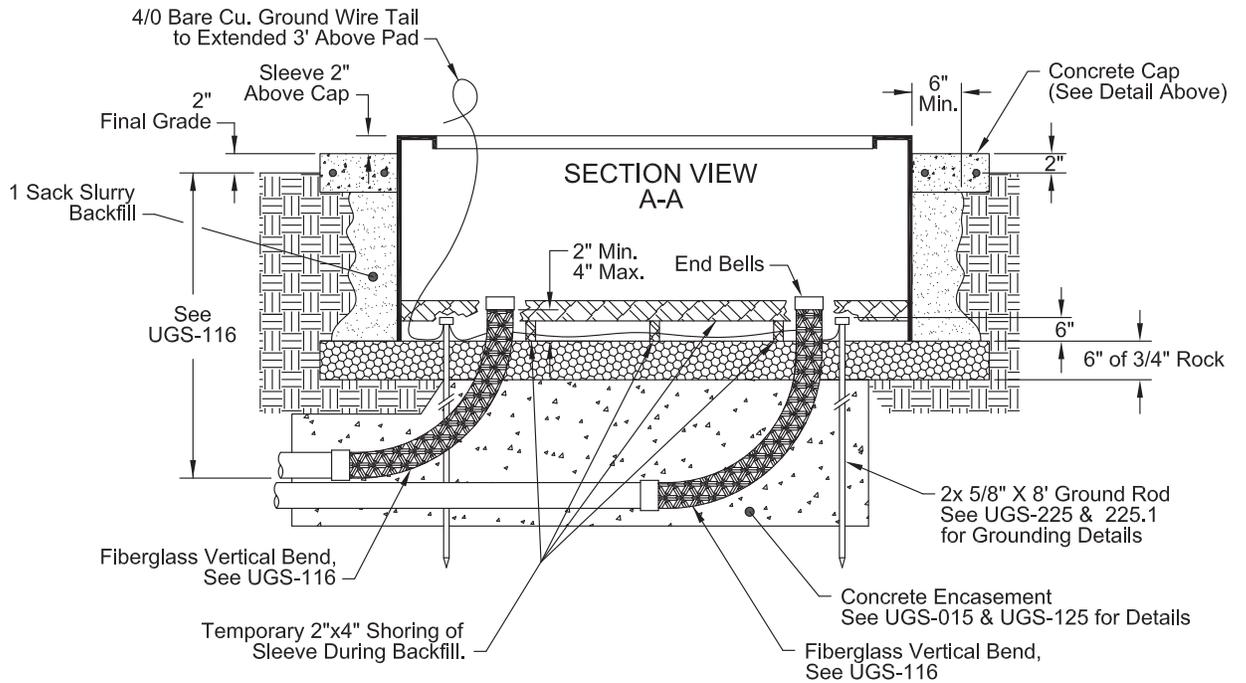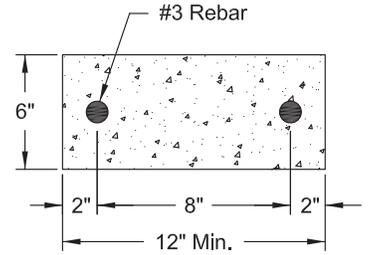

Notes:

1. See UGS-011.1 for box pad requirements.
2. Termination compartments of the switchgear are not to be installed to the front or rear of the box pad.
3. Where required, spare conduits will be installed as shown above.
4. Barrier posts are required per UGS-290.
5. Refer to UGS-225 & UGS-225.1 for Grounding Requirements.
6. Conduit sweeps shall be encased with concrete per UGS-125 and UGS-015 mix #4003.
7. Contractor shall provide temporary 2"x4" shoring during backfill. Backfill shall be a 1 sack slurry mix.
8. Vertical Sweeps shall be fiberglass, See UGS-116 for Fiberglass Sweep Details.