


DUCT SUMP

2-1-67

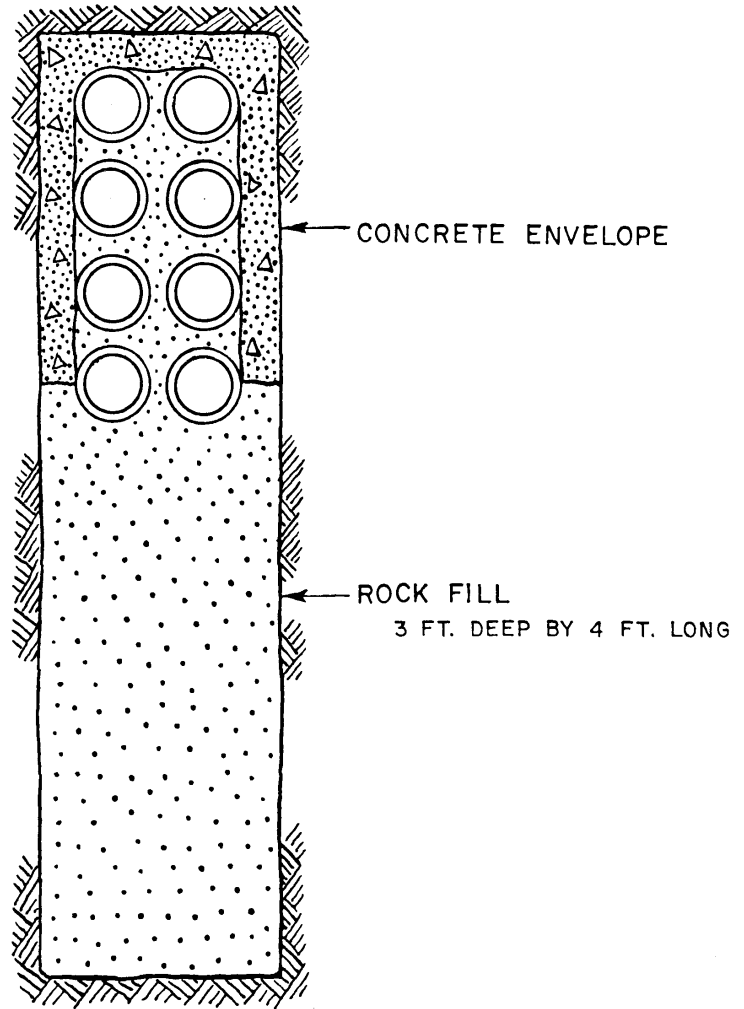

FOR USE AT APPROVED LOCATIONS WHERE NORMAL DUCT DRAINAGE IS NOT PRACTICABLE.

FILL BETWEEN AND BELOW DUCTS WITH 3/4" ROCK FOR SPECIFIED DISTANCE. PLACE NORMAL ENVELOPE OF CONCRETE DOWN BOTH SIDES AND OVER TOP OF DUCT BANK. MAKE DUCT JOINTS LOOSE ABOVE SUMP WITH NOT MORE THAN 1/4" SLACK AT COLLARS.